



# T50 Serie Lötspitzen

Shape D				Shape I	
<b>T50-D02</b>	<b>T50-D04</b>	<b>T50-D06</b>	<b>T50-D1</b>	<b>T50-I01</b>	Unit: mm
N <sub>2</sub> [A] [B]	N <sub>2</sub> [A] [B]	N <sub>2</sub> [A] [B]	N <sub>2</sub> [A] [B]	N <sub>2</sub> [A] [B]	
Shape J		Shape K			
<b>T50-J01</b>	<b>T50-KU</b>	<b>T50-KN</b>			
N <sub>2</sub> [A]	N <sub>2</sub> [A]	N <sub>2</sub> [A]			

Use an FX-9704 Micro N<sub>2</sub> soldering iron with a proper nozzle assembly for the tip.

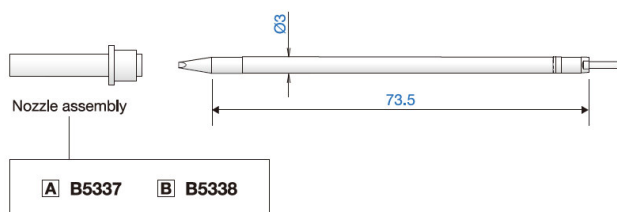

Check out the difference between nozzle assemblies A and B with the tip T50-D06.

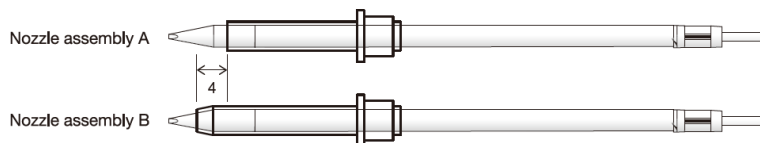

Set the nozzle assembly A when using the tip horizontally or the nozzle assembly B interferes with surrounding components.